- 1. Click: the Start button
- 2. Click: Control Panel



3. Click: View network status and tasks



4. Click: Set up a new connection or network



5. Click: Connect to the Internet then click Next

Set Up a Connection or Network Choose a connection option	
Connect to the Internet     Set up a wireless, broadband, or dial-up connection to the Internet.     Set up a new network     Configure a new router or access point.     Connect to a workplace     Set up a dial-up or VPN connection to your workplace.     Set up a dial-up connection	
Connect to the Internet using a dial-up connection.	Next Canc

6. Click: Set up a new connection anyway

Connect to the Internet	
You are already connected to the Internet	
Browse the Internet now	
Set up a new connection anyway	
	Cancel

7. Click: Dial-up

🔕 Conr	nect to the Internet
How de	o you want to connect?
	Broadband (PPPoE) Connect using DSL or cable that requires a user name and password.
	Dial-up Connect using a dial-up modem or ISDN.
Help	me choose
	Cance

#### 8. Click: Connect

Type the information f	rom your Internet service provide	r (ISP)
Dial-up phone number:	1-800-555-1234	Dialing Rules
<u>U</u> ser name:	Linear	
Password:	123456	
	Show characters           Remember this password	
Connection <u>n</u> ame:	AE-500 Dial-up	
😵 🕅 Allow other people to This option allows an	use this connection yone with access to this computer to use thi	s connection.
I don't have an ISP		

### 9. Click: Skip

🚱 🏟 Connect to the Internet	
Connecting to AE-500 Dial-up	
i i i i i i i i i i i i i i i i i i i	
Dialing 1-800-555-1234	
<u></u>	kip Cancel

### 10. Click: Close

The connection is ready for use	
·	
Connect now	

# 11. Click: Change adapter settings

Control Panel Home	View your basic network information	on and set up connections
Change adapter settings	<b></b>	🍺 —— 🎱
Change advanced sharing settings	WIN-P77RGFIF5IH N (This computer)	letwork Interne
	View your active networks	
	Network Work network	Access type: Internet Connections: 📮 Local A
	Change your networking settings	
	Set up a new connection or network	k:
		and a second

#### 12. Right click and drag the icon on to the desktop



Shortcut on desktop:



13. Double-click the shortcut on the Desktop to open the dialer

Stonnect Al	-500 Dial-up	×
<u>U</u> ser name:		
Password:	[10 change the saved password, cilck	nerej
<ul> <li>Save this i</li> <li>Me online</li> </ul>	iser name and password for the following (	JSEIS:
Service Service	who uses this computer	
Dijal:	1-800-555-1234	*
Dial	Cancel Properties	Help

# 14. Click: Properties

Second Al	-500 Dial-up
<u>U</u> ser name:	Unear
Password:	[To change the saved password, click here]
Save this u Me ogly Anyone	user name and password for the following users: who uses this computer
Dijal:	1-800-555-1234 👻
Dial	Cancel Properties Help

# 15. Click: Configure

Phon	odem - U.S	. Hobotics	V.92 USB Mo	dem (COM4	) C <u>o</u> nfigure
Area	a code:	Phone r	number:		
	*	1-800-5	55-1234	Alt	emates
Cou	ntry/region	code:		_	
	J <u>s</u> e dialing	rules		Dial	ng <u>R</u> ules ]
iee ou forma	r online <u>priv</u> tion.	vacy stater	ment for data o	collection an	d use

### 16. Uncheck Hardware features

Modem Configuration	<b>×</b>
U.S. Robotics V.9	2 USB Modem (COM4)
Maximum speed (bps):	115200 💌
Modem protocol	· · · · · · · · · · · · · · · · · · ·
Hardware features	
Enable hardware flow	control
En <u>a</u> ble modem error co	ontrol
Enable modem compre	ession
☑ Enable mo <u>d</u> em speaker	OK Cancel

#### 17. Click Dial to connect

🐓 Connect AE	-500 Dial-up
<u>U</u> ser name:	Linear
Password:	[To change the saved password, click here]
i @ Me ogly	who uses this computer 1-800-555-1234
Dial	Cancel Properties Help
Connecting to	AE-500 Dial-up ng 1-800-555-1234 Cancel